


# EVDR-Accessories


## Vacuum Limitation Valve

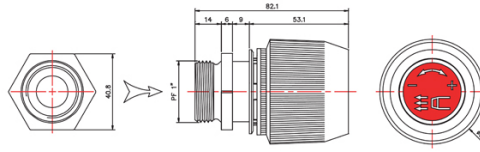

### Vacuum Limitation Valve

With this valve it is possible to control the inlet pressure of the vacuum pump, only for: VRT4.10 till VRT4.40

## Pressure Relief Valve

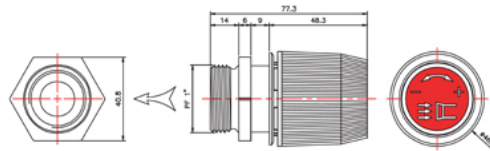

### Pressure Relief Valve

With this valve it is possible to control the exhaust pressure of the compressor, only for: DRT4.10 till DRT4.40

## Non Return Valve



### Non Return Valve

During standstill of the pump (for example due to shutting down or a power failure) the valve closes the intake. This prevents the pressure from rising in the connected piping or chamber while the pump is vented at the same time.

This blocking process operates under all operating conditions (below 800 mbar (600 Torr)).

Only for: VRT4.10 till VRT4.40